

INSTRUCTION MANUAL 使用說明 / 使用说明



ONELINK

WIRELESS KEYBOARD

无线键盘

Wireless Keyboard with Stand

無線鍵盤通座枱皮套

无线键盘支架皮套



KB1

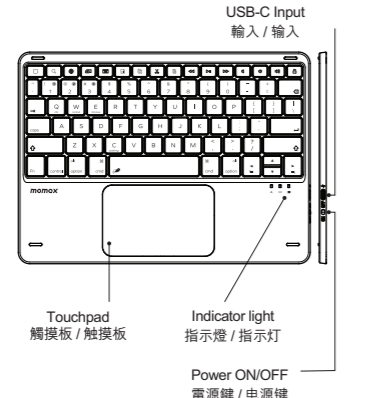


Table with 2 columns: Function (功能/功能) and Operating instructions (操作指示 / 操作指示). Includes sections for Power On/Off, Wireless Pairing, Connected Back, Disconnect Over distance, and Fn combinations.

Table with 2 columns: Function (功能/功能) and Operating instructions (操作指示 / 操作指示). Includes sections for Fn + Left, Fn + Right, and Fn + C.

INSTRUCTION FOR USE 操作 / 操作

Wireless settings connection / 無線連接 / 无线连接

iOS / 蘋果系統 / 苹果系统

- 1. Please turn on the power switch located on the side edge of the keyboard. When indicator light is on, press Fn + C, you will see the lidicator light flashes in blue.

- 4. Prompt the pairing is successful, you can use the functions of the keyboard now. 提示配对成功, 你现在可以使用鍵盤的各项功能。

Android OS / 安卓系統 / 安卓系統

- 1. Please turn on the power switch located on the side edge of the keyboard. When indicator light is on, press Fn + C, you will see the lidicator light flashes in blue.

Win10 OS / Win10系統 / Win10系統

- 1. Please turn on the power switch located on the side edge of the keyboard. When indicator light is on, press Fn + C, you will see the lidicator light flashes in blue.

- 2. Open Settings, click "Add wireless device or other devices". 打開設置 點擊添加"無線設備或其他設備"。

- 3. Select "Blue wireless device" in Add Device to search. 在添加設備裡選擇"藍色無線系統", 進行搜索。

- 4. Until the keyboard name is found, then click pairing name to connect . 直到發現鍵盤名稱, 然後點擊配对。

TOUCHPAD COMMAND (iOS) 觸控板指令 (iOS) / 触控板指令 (iOS)

- One finger tap - single click (can customize function)
Double finger tap - open menu (can customize function)
Pinch with two fingers - zoom in/out browser
Three fingers drag down - open all active windows
Four finger tap - partial screen cap (Cmd + Shift + 4)
Swipe up with three fingers - open/ hide apps dock
Swipe right with three fingers - swipe right between active windows

- One finger drag - move the arrow
Slide two fingers up or down - Scroll
Three finger tap - Home Screen (can customize function)
Swipe up with three fingers - swipe left between active windows
Double tap with one finger and drag - drag items
Two finger swipe left or right - scroll screen from left to right

HOW TO CHARGE 充電 / 充电

When the battery level is lower than 10%, the red indicator light flashes to remind you that you need to charge; the green light is always on when charging, and the green indicator light will turn off after charging is complete.

Sleep function / 鍵盤休眠功能 / 键盘休眠功能

If the keyboard is not operated for more than 20 minutes, the keyboard will enter the sleep mode (power saving mode); Press any key to enter the working state (activation wake-up).

MULTIMEDIA FUNCTION KEY 多媒體功能鍵 / 多媒体功能键

Table with 2 columns: Multimedia Function Key and description. Includes icons and text for Home, Search, Language shift, Screenshot, Virtual keyboard, Select all, Copy, Cut, Paste, Last song, Pause/play, Next song, Mute, Volume down, Volume up, and Screen lock.

SPECIFICATION 產品規格 / 产品规格

MODEL: KB1
Battery type : Lithium Battery
Battery capacity : 180mAh
Charging time : 2 Hours
Charging voltage : 5V=0.15A
Operating voltage : 3.3-4.2V
Operating current : <6.5mA (Button), <15mA (Touch Panel)
Battery life* : Keyboard: 50hrs (max), Touchpad: 15hrs (max)
Supported OS : iOS, Android, Windows
Frequency range : 2.402Ghz-2.4835Ghz
Wireless setting version : v5.0
Key stroke : 1.4±0.2mm
Compatibility : IOS13.4.1 or later, Wins XP or later, Android 6.0 or later
Material (Cover case) : PU leather
Material (Keyboard) : ABS, SGCC, Silicon
Size : 251.3 x 182.2 x 6mm (FOLDED)
Weight : 242±5g(Keyboard), 320±5g(Case)

型號: KB1
電池種類 : 鋰電池
電池容量 : 180mAh
充電時間 : 兩小時
充電電壓 : 5V=0.15A
工作電壓 : 3.3-4.2V
工作電流 : <6.5mA (按鍵), <15mA (觸控板)
電量* : 鍵盤: 最長為50小時, 觸控板: 最長為15小時
*實際電量會因家用操作和無線連接信號強弱存異
支持系統 : iOS, Android, Windows
頻率範圍 : 2.402GHz~2.4835GHz
無線系統版本 : v5.0
鍵程 : 1.4±0.2mm
兼容性 : IOS13.4.1以上系統, Wins XP以上系統, 安卓6.0以上系統
物料 (皮套) : PU皮
物料 (鍵盤) : ABS, SGCC, Silicon
尺寸 : 251.3 x 182.2 x 6mm (折疊)
重量 : 242±5g(鍵盤), 320±5g(皮套)

型號: KB1
電池種類 : 鋰電池
電池容量 : 180mAh
充電時間 : 兩小時
充電電壓 : 5V=0.15A
工作電壓 : 3.3-4.2V
工作電流 : <6.5mA (按鍵), <15mA (觸控板)
電量* : 鍵盤: 最長為50小時, 觸控板: 最長為15小時
*實際電量會因家用操作和無線連接信號強弱存異
支持系統 : iOS, Android, Windows
頻率範圍 : 2.402GHz~2.4835GHz
無線系統版本 : v5.0
鍵程 : 1.4±0.2mm
兼容性 : IOS13.4.1以上系統, Wins XP以上系統, 安卓6.0以上系統
物料 (皮套) : PU皮
物料 (鍵盤) : ABS, SGCC, Silicon
尺寸 : 251.3 x 182.2 x 6mm (折疊)
重量 : 242±5g(鍵盤), 320±5g(皮套)

- WARNING
1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Avoid direct sunlight. Keep away from heat source;
6. Avoid high processor load in long running loops or while charging;
7. Ensure good ventilation while using;
8. In case of overheating, stop using the product.
9. Avoid scratching the product with sharp objects, and charge the product or replace the dry battery in time to ensure normal use.

- DISPOSAL OF ELECTRONIC PRODUCTS
1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX encourages you to participate in electronics recycling program.

- WARRANTY CONDITIONS
1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if:

- (a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or;
(b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
(c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card will be allowed;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.

- 9. 避免使用鋒利器物刮擦產品, 及時給產品進行充電或更換乾電池以保證正常使用。
如何處理廢棄電子產品
1. 請勿將電子產品當成家庭廢棄物丟棄;
2. 請依當地的法例規定處理廢棄的電子產品;
3. MOMAX鼓勵您積極參與電子產品回收計劃。
保養條款
1. 由購買日期起12個月內, 如產品有損壞或故障, 經本公司技術人員證實為在正常使用之情況下發生, 本公司將提供免費維修服務;
2. 維修時必須出示本保用證及購買商號之發票正本, 如果用戶不能提供, 本公司有權不提供維修服務。用戶可能需要支付相關維修費用;
3. 保用期內, 出現以下條款產品保用證自動失效:
(a) 非本公司人員蓄意拆解或維修產品之任何部分;
(b) 錯誤的操作如: 非法接駁電源, 以及水、污物滲入產品內導致產品損壞;
(c) 不可抗拒意外事件或天然災害導致產品損壞;

- 警告
1. 請勿自行拆開或改裝本產品;
2. 請勿將本產品存放在潮濕環境中;
3. 請勿將產品靠近熱源或於熱源附近充電;
4. 請勿將水或其它液體流入本產品內部, 導致本產品損壞;
5. 避免陽光直接照射;
6. 使用或充電期間避免長時間運行高耗能的程式;
7. 請于通風良好的地方使用;
8. 如出現過熱, 請停止使用;
9. 避免使用鋒利器物刮擦產品, 及時給產品進行充電或更換乾電池以保證正常使用。
如何處理廢棄電子產品
1. 請勿將電子產品當成家庭廢棄物丟棄;
2. 請依當地的法例規定處理廢棄的電子產品;
3. MOMAX鼓勵您積極參與電子產品回收計劃。

- 警告 (c) 不可抗拒意外事件或天然災害導致產品損壞;
4. 此保用證如經塗改, 保用證自動失效;
5. 本公司有權刪除任何維修及保用條款而不作通知;
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞, 本公司不會承擔任何責任;
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性, 請在購買時向經銷商確認。此產品規格隨時可能變更, 恕不另行通知;
8. 請瀏覽 www.momax.net 了解最新產品資訊。

momax WARRANTY/保用證/保用证
Model/型號/型号:
Date of Purchase/購買日期/购买日期:
Remarks/備註/备注:
Customer Service/客戶服務中心/客户服务中心
Unit A, 4/F., Cheung Lung Ind. Bldg., 10 Cheung Yee Street, Lai Chi Kok, Kowloon, Hong Kong
Hotline: 852-2402 3186 E-Mail: info@momax.net
香港及澳門:
香港九龍慈雲寺角長壽街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net
中國內地:
摩士士科技(深圳)有限公司
深圳市福田區香林路富春東方大廈709
郵編: 518000 全國服務熱線: 86-400-886-0010
電話: info@momax.net.cn
Copyright© 2022 MOMAX Technology Ltd. All rights reserved. MOMAX is registered trademark of MOMAX Technology Ltd. All other trademarks are the property of their respective owners.
版權所有 ©2022 MOMAX Technology Ltd., 保留所有權利。
MOMAX是 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自擁有者的財產。
版權所有 ©2022 MOMAX Technology Ltd., 保留所有權利。
MOMAX是 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自擁有者的財產。

