


INSTRUCTION MANUAL

使用說明 / 使用说明


momax

Ultra Freeze

Portable Icy Cooling Fan
冰敷手持高速風扇

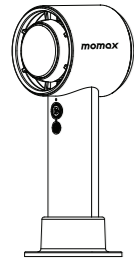

IF15

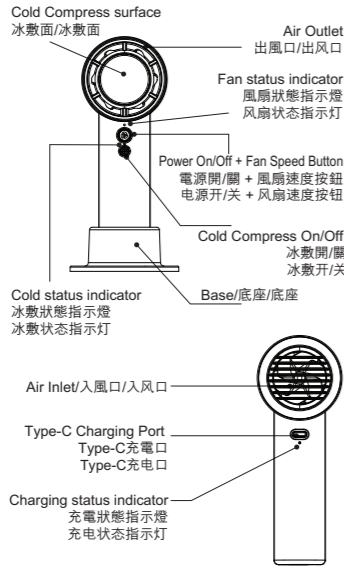

USER GUIDE

用戶指南/用戶指南

First Short-Click on the Button: Turns on the fan with the default lowest speed.
Second Short-Click on the Fan Button: Turns off the fan.
First Long Press on the Fan Button: Increases the fan speed in a continuous, stepless manner.
Second Long Press on the Fan Button: Reduces the speed to the minimum level and continues steplessly increasing the speed in a loop.

When the fan is in operation mode:
First Short-Click on the Cooling Button: Turns on the cooling function.
Second Short-Click on the Cooling Button: Turns off the cooling function.
Note: When cooling is activated, the fan automatically reduces to the lowest speed.

When the fan is working: the indicator (blue) is always on.
During the process of increasing/decreasing the wind speed: the indicator (blue) is always on.
When increasing the speed to the maximum: the indicator (blue) flashes.

When Cold-compress is turned on, the indicator light (white light) is always on.
When cooling is turned off, the indicator light (white light) goes out.
開啟冰敷時,冰敷指示燈(白燈)長亮。
關閉冰敷時,冰敷指示燈(白燈)熄滅。

SPECIFICATION

產品規格 / 产品规格

Table with 2 columns: Model: IF15, USB-C Input, Capacity, Operation time, Working Mode, Wind Blade, Fan Speed, Charging time, Fan speed, Max Wind speed, Material, Size, Weight.

Table with 2 columns: Model: IF15, USB-C 輸入, 容量, 工作時間, 工作模式, 風扇模式, 風扇速度, 充電時間, 馬達轉速, 最大風速, 材質, 尺寸, 重量.

Table with 2 columns: Model: IF15, USB-C 輸入, 容量, 工作時間, 工作模式, 風扇模式, 風扇速度, 充電時間, 馬達轉速, 最大風速, 材質, 尺寸, 重量.

- CONTAINS: 1. Portable Icy Cooling Fan, 2. Base, 3. USB-A to USB-A Cable (0.5m), 6. Instruction manual and warranty card

- 包裝內容: 1. 冰敷手持高速風扇, 2. 底座, 3. USB-A 至 USB-C 充電線 (0.5米), 4. 使用說明及保用證

- 包裝內容: 1. 冰敷手持高速風扇, 2. 底座, 3. USB-A 至 USB-C 充電線 (0.5米), 4. 使用說明及保用證

MAINTENANCE

維護 / 维护

Maintenance and storage / 清潔與保養 / 清洁与保养

- When cleaning the main body, wipe it with a soft cloth dampened with neutral detergent, then remove any remaining detergent with a dry cloth.
Directly rinsing the body of the product with water is not allowed.
Avoid using abrasive tools or solvents that could damage the surface when cleaning this product.



- 1. 清理本體時, 請用軟質布沾中性清潔劑擦拭, 再用乾布將殘留的清潔劑擦拭乾淨即可。
2. 禁止用水直接沖洗機身。
3. 請勿使用任何會損壞表面的研磨工具和溶劑清潔本產品, 可用肥皂清洗, 並及時用乾布抹淨。

WARNING

- 1. Voltage Check: Before using this product, please verify that the voltage is within the normal range.
2. Prohibited Actions: It is strictly forbidden to disassemble the product privately or handle it roughly.
3. Power Supply Guidelines: When connecting the product to a power source, use a charger with an output current of 5V=2A and a standard Type-C charging cable.

DISPOSAL OF ELECTRONIC PRODUCTS

- 1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

- 1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if: (a) it has explicitly modified or repaired in any way by persons other than technicians of this company; (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or; (c) losses or damages are caused by force majeure or natural disasters.

警告

- 1. 電壓檢查: 在使用此產品之前, 請確認電壓是否在正常範圍內。
2. 禁止的操作: 嚴禁私自拆卸產品或粗暴處理。
3. 電源供應指南: 連接產品到電源時, 請使用輸出電流為5V=2A且標準Type-C充電線的充電器。
4. 安全注意事項: 進氣口/出氣口: 請勿將手指或硬物插入進氣口或出氣口, 以防止內部風扇葉片造成的傷害和對產品的損壞。

此產品中的鋰電池只能由工廠或合格的供應商更換。不遵循本手冊中的電池更換說明可能會導致損失或不良影響。
6. 環保處理: 將產品的鋰電池與家庭垃圾分開處理, 以減少污染並保護全球環境。請適當地進行回收。

如何處理廢棄電子產品

- 1. 請勿將電子產品當成家庭廢棄物丟棄;
2. 請依當地的法規規定處理廢棄的電子產品;
3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款

- 1. 由購買日期起12個月內, 如產品有損壞或故障, 經本公司技術人員證實為在正常使用之情況下發生, 本公司將提供免費維修服務;
2. 維修時必須出示本保用證及購買商號之發票正本, 如果用戶不能提供, 本公司有權不提供維修服務。用戶可能需要支付相關維修費用;
3. 保用期內, 出現以下條款產品保用證自動失效; (a) 非本公司人員蓄意拆解或維修產品之任何部分; (b) 錯誤的操作如: 非法接駁電源, 以及水、污穢物滲入產品內導致產品損壞; (c) 不可抗拒意外事件或天然災害導致產品損壞;
4. 此保用證如經塗改, 保用證自動失效;
5. 本公司有權增刪任何維修及保用條款而不作通知;
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞, 本公司不會承擔任何責任;
7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性, 請在購買時向經銷商確認。此產品規格隨時可能變更, 恕不另行通知;
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告

- 1. 电压检查: 在使用此产品之前, 请确认电压是否在正常范围内。
2. 禁止的操作: 嚴禁私自拆卸產品或粗暴處理。
3. 防火安全: 避免將產品放在明火或火源附近, 以防止火災或爆炸風險。
4. 儿童和宠物安全: 將產品存放在兒童和寵物無法接觸的地方。
5. 电源供应指南: 连接产品到电源时, 请使用输出电流为5V=2A且标准Type-C充电线的充电器。
6. 安全注意事项: 進氣口/出氣口: 請勿將手指或硬物插入進氣口或出氣口, 以防止內部風扇葉片造成的傷害和對產品的損壞。
7. 异常情况: 如果在使用產品時出現任何異常情況, 請立即停止使用。
8. 避免拆卸和撞擊: 請勿拆卸、撞擊、擠壓或將產品暴露於火源。如果出現嚴重腫脹, 請停止使用, 避免將產品放在高溫環境中。
9. 浸水: 請勿在電池浸泡在水中後使用。

保养条款

- 1. 由购买日期起12个月内, 如产品有损坏或故障, 经本公司技术人员证实为在正常使用之情况下发生, 本公司将提供免费维修服务;
2. 维修时必须出示本保用证及购买商号之发票正本, 如果用户不能提供, 本公司有权不提供维修服务。用户可能需要支付相关维修费用;
3. 保用期内, 出现以下条款产品保用证自动失效; (a) 非本公司人员蓄意拆解或维修产品之任何部分; (b) 错误的操作如: 非法接驳电源, 以及水、污秽物渗入产品内导致产品损坏; (c) 不可抗拒意外事件或天然灾害导致产品损坏;
4. 此保用证如经涂改, 保用证自动失效;
5. 本公司有权增删任何维修及保用条款而不作通知;
6. 如因错误使用本公司产品而导致手提电话或其他电子产品有任何损坏, 本公司不会承担任何责任;
7. 有关 MOMAX 原装产品和您的手机或电子产品的相容性, 请在购买时向经销商确认。此产品规格随时可能变更, 恕不另行通知;
8. 请浏览 www.momax.net 了解最新产品信息。

有害物质或元素附表

Table with 2 columns: 部件名称, 有害物质或元素. Rows include 主机, 附件.

0: 表示该有害物质在该部件所有均 X: 表示该有害物质至少在该部件...
GB/T 26572 符合 GB/T 26572 符合 GB/T 26572 符合 GB/T 26572 符合 GB/T 26572 符合



momax WARRANTY/保用證/保用证
Model/型號/型号:
Date of Purchase/購買日期/购买日期:
Remarks/備註/备注:
Customer Service/客戶服務中心/客户服务中心
Hong Kong and Macau: Unit A, 4/F., Cheung Lung Ind. Bldg., Lai Chi Kok, Kowloon, Hong Kong
E-Mail: info@momax.net
香港及澳門: 香港九龍荔枝角長發街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net
中国内地: 摩米士科技(深圳)有限公司
广东省深圳市龙岗区坂田街道岗头社区雪岗路2016号
宇隆布厂厂房A四座
邮编: 518000 全国服务热线: 86-400-886-0010
电邮: info@momax.net.cn
Copyright©2024 MOMAX Technology Ltd. All rights reserved. MOMAX is registered trademark of MOMAX Technology Ltd.