

INSTRUCTION MANUAL


使用说明 / 使用说明

**momax**


N

**Q.MAG X1**

10000mAh Magnetic Wireless Battery Pack  
10000mAh超薄磁吸流动电源  
10000mAh超薄磁吸移动电源

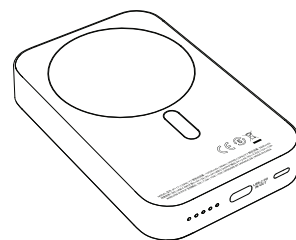

IP117

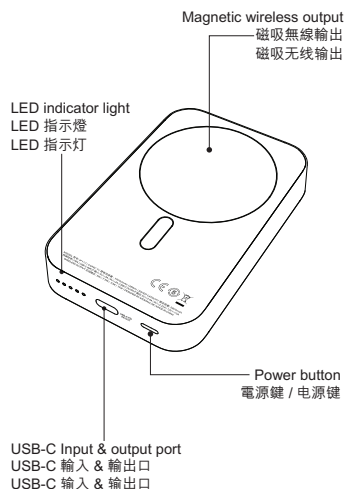

PD3.0

INSTRUCTION FOR USE

操作 / 操作

1. There are 2 ways to charge your device(s), connect Q.Mag X1 to your device through

- A. Wireless charging (applicable to Qi-enabled device only)
- B. The USB-C PD port

Note: To charge small devices like Bluetooth earbuds, fitness tracker, AirPods Pro, etc., double click the Power button to turn ON small current mode. Remember to double click again to turn OFF this mode when charging is completed. Otherwise, the battery pack will automatically turn OFF in 2 hours.

2. To recharge your Q.Mag X1, connect the USB-C PD port to a power adapter. The LED will flicker in white progressively, indicating charging is in progress. All LEDs will be ON in white when charging is completed. Unplug Q.Mag X1 from the power supply.

1. 有2種方式為您的設備充電，將 Q.Mag X1 通過以下方式連接您的設備，

- A. 無線充電 (僅適用於兼容Qi的設備)
- B. USB-C PD 插口

注意：要為藍牙耳機，智能手環，Airpods Pro等小型設備充電，請雙擊電源按鈕以打開小電流模式。記得在充電完成後再次雙擊以關閉此模式。否則，電池將在2小時後自動關閉。

2. 要給Q.Mag X1充電，請連接USB-C PD 插口到電源適配器。LED會逐步閃爍白色，表示充電進行中。當所有LED均亮白色，代表充電完成。請將Q.Mag X1 斷開電源連接。

1. 有2種方式為您的設備充電，將 Q.Mag X1 通過以下方式連接您的設備，

- A. 無線充電 (僅適用於兼容Qi的設備)
- B. USB-C PD 插口

注意：要為藍牙耳機，智能手環，Airpods Pro等小型設備充電，請雙擊電源按鈕以打開小電流模式。記得在充電完成後再次雙擊以關閉此模式。否則，電池將在2小時後自動關閉。

2. 要給Q.Mag X1充電，請連接USB-C PD 插口到電源適配器。LED會逐步閃爍白色，表示充電進行中。當所有LED均亮白色，代表充電完成。請將 Q.Mag X1 斷開電源連接。

Table with 2 columns: Indicator (顯示燈 / 显示灯) and Status (狀態 / 状态). Rows include LED ON in red color (Wireless Charging Mode is ON), LED ON in green color (Fast Charging Mode is ON), 4 LED ON (Battery Level >75%), 3 LED ON (Battery Level >50%), 2 LED ON (Battery Level >25%), 1 LED ON (Battery Level >10%), and 1 LED Flashing (Battery Level <10%).

Table with 2 columns: Indicator (顯示燈 / 显示灯) and Status (狀態 / 状态). Rows include LED blink progressively (Small current mode is ON) and 1 LED flickers in red (Foreign object is detected).

SPECIFICATION

產品規格 / 产品规格

MODEL: IP117

Capacity : 10000mAh (38Wh)

Rated Capacity : 5800mAh

USB-C Input : 5V=3A, 9V=2A

USB-C PD Output : 5V=2.4A, 9V=2.22A, 12V=1.5A

Wireless Output : 5W, 7.5W,10W, 15W

Dual-port Output : 5V=3A

Material : Glass+Aluminum

Size : 68.5x13x108mm

Weight : 202g ±10g

CONTAINS:

- 1. Q.Mag X1 10000mAh wireless battery pack
- 2. USB-C to USB-C cable (18CM)
- 3. Cleaning Cloth
- 4. Instruction Manual and Warranty Card



www.momax.net

型號: IP117

容量 : 10000mAh (38Wh)

額定容量 : 5800mAh

輸入(USB-C) : 5V=3A, 9V=2A

輸出(USB-C PD) : 5V=2.4A, 9V=2.22A, 12V=1.5A

無線輸出 : 5W, 7.5W,10W, 15W

雙輸出 : 5V=3A

材質 : 玻璃 + 鋁合金

尺寸 : 68.5x13x108mm

重量 : 202g ±10g

型號: IP117

容量 : 10000mAh (38Wh)

額定容量 : 5800mAh

輸入(USB-C) : 5V=3A, 9V=2A

輸出(USB-C PD) : 5V=2.4A, 9V=2.22A, 12V=1.5A

無線輸出 : 5W, 7.5W,10W, 15W

雙輸出 : 5V=3A

材質 : 玻璃 + 鋁合金

尺寸 : 68.5x13x108mm

重量 : 202g ±10g

包裝內容:

- 1. Q.Mag X1 10000mAh 超薄磁吸流动电源
- 2. USB-C 至 USB-C 連接線 (18CM)
- 3. 清潔布
- 4. 說明書及保用證

包裝內容:

- 1. Q.Mag X1 10000mAh 超薄磁吸移动电源
- 2. USB-C 至 USB-C 连接线 (18CM)
- 3. 清洁布
- 4. 说明书及保用证

WARNING

- 1. Do not dismantle or modify the product;
- 2. Do not store the product in wet conditions;
- 3. Do not keep or use the product near heat sources;
- 4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
- 5. Stop charging or using the product in case of battery expansion.
- 6. Make sure to remove metallic, magnetic protective case or chip cards like bank cards ,etc from your device when charging.
- 7. While charging, the charger may heat up. This is normal and should not affect charger's performance. If the charger feels hot to the touch during this charging process, remove the device from the charger and allow it to cool down before restarting the charging process;
- 8. Avoid using bent or damaged USB cable.

DISPOSAL OF ELECTRONIC PRODUCTS

- 1. Do not place the product as household waste;
- 2. Please dispose of discarded electronic products properly according to local regulations.
- 3. MOMAX encourages you to participate in electronics recycling program.

WARRANTY CONDITIONS

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our

company;

- 2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
- 3. This warranty card shall not apply to the product if: (a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or; (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or; (c) losses or damages are caused by force majeure or natural disasters.
- 4. No alteration to this warranty card will be allowed;
- 5. The warranty terms and conditions are subject to change without prior notice;
- 6. Please retain your proof of purchase for warranty service;
- 7. Please consult the dealer about the product compatibility with your cell phone/ PDA before purchase. Product specifications are subject to change without prior notice;
- 8. Please visit www.momax.net for latest product information.

警告

- 1. 請勿自行拆開或改裝本產品；
- 2. 請勿將本產品存放在潮濕環境中；
- 3. 請勿將產品靠近熱源或於熱源附近充電；
- 4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
- 5. 如果本產品電池膨脹，請停止充電或使用。
- 6. 充電時，請務必從你的設備上取下金屬、磁性保護外殼或卡（如銀行卡等）。
- 7. 充電時，有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機或產品過熱，請斷開電源供應，待冷卻後，再嘗試充電；
- 8. 避免使用彎曲或損壞的USB線材。

如何處理廢棄電子產品

- 1. 請勿將電子產品當成家庭廢棄物丟棄；
- 2. 請依當地的法例規定處理廢棄的電子產品；
- 3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款

- 1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
- 2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
- 3. 保用期內，出現以下條款產品保用證自動失效：(a) 非本公司人員蓄意拆解或維修產品之任何部分；(b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；(c) 不可抗拒意外事件或天然災害導致產品損壞；
- 4. 此保用證如經塗改，保用證自動失效；

- 5. 本公司有權增刪任何維修及保用條款而不作通知；
- 6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
- 7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；
- 8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告

- 1. 請勿自行拆開或改裝本產品；
- 2. 請勿將本產品存放在潮濕環境中；
- 3. 請勿將產品靠近熱源或於熱源附近充電；
- 4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
- 5. 如果本產品電池膨脹，請停止充電或使用。
- 6. 充電時，請務必從你的設備上取下金屬、磁性保護外殼或卡（如銀行卡等）。
- 7. 充電時，有可能產生熱力，此乃正常現象，並不會影響產品表現。但如果感到手機或產品過熱，請斷開電源供應，待冷卻後，再嘗試充電；
- 8. 避免使用彎曲或損壞的USB線材。

如何处理废弃电子产品

- 1. 请勿将电子产品当成家庭废弃物丢弃；
- 2. 请依当地的法例规定处理废弃的电子产品；
- 3. MOMAX鼓励您积极参与电子产品回收计划。

保养条款

- 1. 由购买日期起12个月内，如产品有损坏或故障，经本公司技术人员证实为在正常使用之情况下发生，本公司将提供免费维修服务；
- 2. 维修时必须出示本保用证及购买商号之发票正本，如果用户不能提供，本公司有权不提供维修服务。用户可能需要支付相关维修费用；
- 3. 保用期内，出现以下条款产品保用证自动失效：(a) 非本公司人员蓄意拆解或维修产品之任何部分；(b) 错误的操作如：非法接驳电源，以及水、污秽物渗入产品内导致产品损坏；(c) 不可抗拒意外事件或天然灾害导致产品损坏；
- 4. 此保用证如经涂改，保用证自动失效；

- 5. 本公司有權增刪任何維修及保用條款而不作通知；
- 6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
- 7. 有關 MOMAX 原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通知；
- 8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

**momax**

WARRANTY/保用證/保用证

Model/型號/型号: .....

Date of Purchase/購買日期/购买日期: .....

Remarks/備註/备注: .....

Customer Service/客戶服務中心/客户服务中心

Hong Kong and Macau:  
Unit A, 4/F., Cheung Lung Ind. Bldg.,10 Cheung Yee Street,  
Lai Chi Kok, Kowloon, Hong Kong  
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:  
香港九龍荔枝角長善街10號昌隆大廈4樓A室  
服務熱線: 852-2402 3186 電郵: info@momax.net

中國內地:  
摩米士科技(深圳)有限公司  
广东省深圳市龙岗区坂田街道雪岗头社区雪岗路2016号威宇隆布吉厂房A四层  
邮编: 518000 全国服务热线: 86-400-886-0010  
电邮: info@momax.net.cn

Copyright© 2024 MOMAX Technology Ltd. All rights reserved. MOMAX is registered trademark of MOMAX Technology Ltd. All other trademarks are the property of their respective owners. 版權所有 ©2024 MOMAX Technology Ltd. 保留所有權利。 MOMAX是 MOMAX Technology Ltd 的註冊商標。 所有其他商標均為其各自擁有者的財產。 版權所有 ©2024 MOMAX Technology Ltd. 保留所有權利。 MOMAX是 MOMAX Technology Ltd 的註冊商標。 所有其他商標均為其各自擁有者的財產。

Table with 2 columns: 有害物质或元素 (Hazardous substances or elements) and 有害物质或元素 (Hazardous substances or elements). Rows include 部件名称 (Component name) and 零件 (Parts).

