

INSTRUCTION MANUAL


使用說明 / 使用说明

momax**UC 15**

38W dual-port car charger
38W 雙輸出車載充電器
38W 双输出车载充电器



UC15

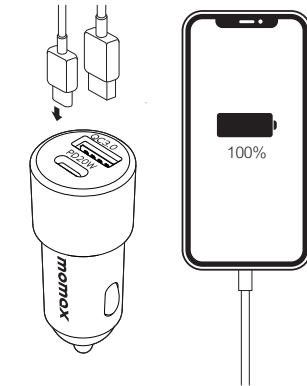

*USB cable is not included /
不附設USB連接線 / 不附設USB連接線

INSTRUCTION FOR USE

操作/操作

1. Connect a USB cable to UC Series car charger;
2. Plug the UC Series car charger into the car's DC port
3. Connect the USB cable to a mobile phone or other compatible device. The car charger will start charging the device(s);
4. Remove UC Series car charger from the car's DC port when charging is completed.

1. 將USB連接線連接在UC系列汽車充電器；
2. 將UC系列汽車充電器插入汽車電源插座上；
3. 將USB連接線接頭連接手機或其他兼容電子設備，汽車充電器開始為設備充電；
4. 充電完成後，移除汽車電源插座上的汽車充電器。

1. 將USB連接線連接在UC系列汽車充電器；
2. 將UC系列汽車充電器插入汽車電源插座上；
3. 將USB連接線接頭連接手機或其他兼容電子設備，汽車充電器開始為設備充電；
4. 充電完成後，移除汽車電源插座上的汽車充電器。

SPECIFICATION

產品規格 / 产品规格

MODEL: UC15

Input : DC12-24V=3.5A
Output 1 : 5V=3A, 9V=2A, 12V=1.5A (18W)
(Qualcomm® Quick Charge™ 3.0 technology)
Output 2 : 5V=3A, 9V=2.22A*, 12V=1.67A
(USB-C PD) (20W)
*Applicable to compatible device only.
Total Output : 38W
Material : PC+Aluminum
Size : ø24.5 x 61mm
Weight : 25g ±5g

Contains:

1. 38W Dual-port Car Charger
2. Instruction manual and warranty card

型號: UC15

輸入 : DC12-24V=3.5A
輸出 1 : 5V=3A, 9V=2A, 12V=1.5A(18W)
(Qualcomm® Quick Charge™ 3.0 technology)
輸出 2 : 5V=3A, 9V=2.22A*, 12V=1.67A
(USB-C PD) (20W)
* 僅適用於兼容設備。
總輸出: 38W
材質 : PC+鋁合金
尺寸 : ø24.5 x 61mm

重量 : 25g ±5g

包裝內容:

1. 38W 雙輸出車載充電器
2. 保用證及使用說明

型號: UC15

輸入 : DC12-24V=3.5A
輸出 1 : 5V=3A, 9V=2A, 12V=1.5A(18W)
(Qualcomm® Quick Charge™ 3.0 technology)
輸出 2 : 5V=3A, 9V=2.22A*, 12V=1.67A
(USB-C PD) (20W)
* 仅适用于兼容设备。
总输出: 38W
材质 : PC+铝合金
尺寸 : ø24.5 x 61mm
重量 : 25g ±5g

包裝內容:

1. 38W 双输出车载充电器
2. 保用证及使用说明

UC15_Manual_aw 背面

WARNING

1. Do not dismantle or modify the product;
2. Do not store the product in wet conditions;
3. Do not keep or use the product near heat sources;
4. Do not let water or any other liquid flows into the inside part of the product's interface. This would cause damages to the product;
5. Avoid direct sunlight. Keep away from heat source;
6. Avoid high processor load in long running loops or while charging;
7. In case of overheating, stop using the product.

DISPOSAL OF ELECTRONIC PRODUCTS

1. Do not place the product as household waste;
2. Please dispose of discarded electronic products properly according to local regulations.
3. MOMAX鼓勵您積極參與電子產品回收計劃。

WARRANTY CONDITIONS

1. For any defect, in the judgment of our technician, caused under normal use, we are responsible for repairing free of charges 12 months commencing from the date of purchase at the discretion of our company;
2. A valid warranty card and original purchase invoice must be presented upon request of warranty service;
3. This warranty card shall not apply to the product if:
 - (a) it has explicitly modified or repaired in any way by persons other than technicians of this company, or;
 - (b) it has been damaged through misuse, malicious acts, negligence, inflow of any liquid, or;
 - (c) losses or damages are caused by force majeure or natural disasters.
4. No alteration to this warranty card before purchase. Product specifications are subject to change without prior notice;
5. The warranty terms and conditions are subject to change without prior notice;
6. Please retain your proof of purchase for warranty service;
7. Please consult the dealer about the product compatibility with your cell phone's PDA before purchase. Product specifications are subject to change without prior notice;
8. Please visit www.momax.net for latest product information.

警告

1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；

3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 避免陽光直接照射；
6. 使用或充電期間避免長時間運行高耗能的程式；
7. 如出現過熱，請停止使用。

如何處理廢棄電子產品

1. 請勿將電子產品當成家庭廢棄物丟棄；
2. 請依當地的法規規定處理廢棄的電子產品；
3. MOMAX鼓勵您積極參與電子產品回收計劃。

保養條款

1. 由購買日期起12個月內，如產品有損壞或故障，經本公司技術人員證實為在正常使用之情況下發生，本公司將提供免費維修服務；
2. 維修時必須出示本保用證及購買商號之發票正本，如果用戶不能提供，本公司有權不提供維修服務。用戶可能需要支付相關維修費用；
3. 保用期內，出現以下條款產品保用證自動失效：
 - (a) 非本公司人員恣意拆解或維修產品之任何部分；
 - (b) 錯誤的操作如：非法接駁電源，以及水、污穢物滲入產品內導致產品損壞；
 - (c) 不可抗拒意外事件或天然災害導致產品損壞；
4. 此保用證如經塗改，保用證自動失效；
5. 本公司有權增刪任何維修及保用條款而不作通知；
6. 如因錯誤使用本公司產品而導致手提電話或其他電子產品有任何損壞，本公司不會承擔任何責任；
7. 有關MOMAX原裝產品和您的手機或電子產品的相容性，請在購買時向經銷商確認。此產品規格隨時可能變更，恕不另行通告；
8. 請瀏覽 www.momax.net 瞭解最新產品資訊。

警告

1. 請勿自行拆開或改裝本產品；
2. 請勿將本產品存放在潮濕環境中；
3. 請勿將產品靠近熱源或於熱源附近充電；
4. 請勿將水或其它液體流入本產品介面內部，導致本產品損壞；
5. 避免陽光直接照射；
6. 使用或充電期間避免長時間運行高耗能的程式；

7. 如出現過熱，請停止使用。

如何处理废弃电子产品

1. 请勿将电子产品当成家庭废弃物丢弃；
2. 请依当地的法规规定处理废弃的电子产品；
3. MOMAX鼓励您积极参与电子产品回收计划。

保养条款

1. 由购买日期起12个月内，如产品有损坏或故障，经本公司技术人员证实为在正常使用之情况下发生，本公司将提供免费维修服务；
2. 维修时必须出示本保用证及购买商号之发票正本，如果用户不能提供，本公司有提供维修服务。用户可能需要支付相关维修费用；
3. 保用期内，出现以下条款产品保用证自动失效：
 - (a) 非本公司人员恣意拆解或维修产品之任何部分；
 - (b) 错误的操作如：非法接驳电源，以及水、污秽物渗入产品内导致产品损坏；
 - (c) 不可抗拒意外事件或天然灾害导致产品损坏；
4. 此保用证如经涂改，保用证自动失效；
5. 本公司有权利增删任何维修及保用条款而不作通知；
6. 如因错误使用本公司产品而导致手提电话或其他电子产品有任何损坏，本公司不会承担任何责任；
7. 有关MOMAX原装产品和您的手机或电子产品的相容性，请在购买时向经销商确认。此产品规格随时可能变更，恕不另行通告；
8. 请浏览 www.momax.net 了解最新产品资讯。

www.momax.net**momax****WARRANTY/保用證/保用证**

Model/型號/型号:

Date of Purchase/購買日期/购买日期:

Remarks/備註/备注:

Customer Service/客戶服務中心/客户服务中心

Hong Kong and Macau:
Unit A, 4/F., Cheung Lung Ind. Bldg., 10 Cheung Yee Street,
Lai Chi Kok, Kowloon, Hong Kong
Hotline: 852-2402 3186 E-Mail: info@momax.net

香港及澳門:
香港九龍荔枝角長發街10號昌隆大廈4樓A室
服務熱線: 852-2402 3186 電郵: info@momax.net

中國內地:
摩米士科技(深圳)有限公司
廣東省深圳市深南大道7006號方科富春東方大廈7樓
郵編: 518000 全國服務熱線: 86-400-886-0010
電郵: info@momax.net.cn

Copyright© 2022 MOMAX Technology Ltd. All rights reserved.
MOMAX is registered trademark of MOMAX Technology Ltd.
All other trademarks are the property of their respective owners.
版權所有 ©2022 MOMAX Technology Ltd. 保留所有權利。
MOMAX是 MOMAX Technology Ltd 的註冊商標。
所有其他商標均為其各自擁有者的財產。
版權所有 ©2022 MOMAX Technology Ltd. 保留所有權利。
MOMAX是 MOMAX Technology Ltd 的註冊商標。所有其他商標均為其各自擁有者的財產。